
Assembly Instructions

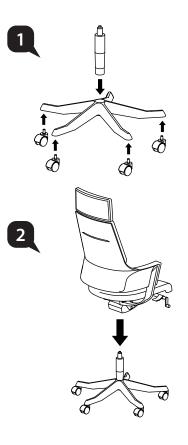

User Instructions

A Seat Height Adjustment

Flip up lever on right-side to raise or lower seat. Adjust such that your feet are adequately supported on the floor.

B Multi-Position Tilt Lock

Recline to desired position, and flip down lever on left-side to lock. Flip up lever to release tilt-lock.

C Tilt Tension Control

Turn side knob clockwise to provide a stronger tlit tension, and vice-versa. Adjust such that minimum effort is required to push back when reclining.

D Headrest Height

Adjust height by holding both sides of headrest and pull up or down to your desired height.



